

How To Retrieve the RMM IP

If you need to find out the Current IP of the Remote Management (RMM) Port of your BrickStor so that you can manage the appliance out of band use one of the following methods.


From The myRack Manager (GUI)

Click on the BrickStor Appliance in the Left Navigation Pane

1. Login to the appliance
2. If the GUI is unable to connect but has connected to this BrickStor appliance in the past it will automatically give you the option in the failure message to Open RMM Console which will launch an web browser with the proper IP.



3. If you are connected to the appliance you can view the RMM by clicking the RMM console under the Hardware Section of the GUI

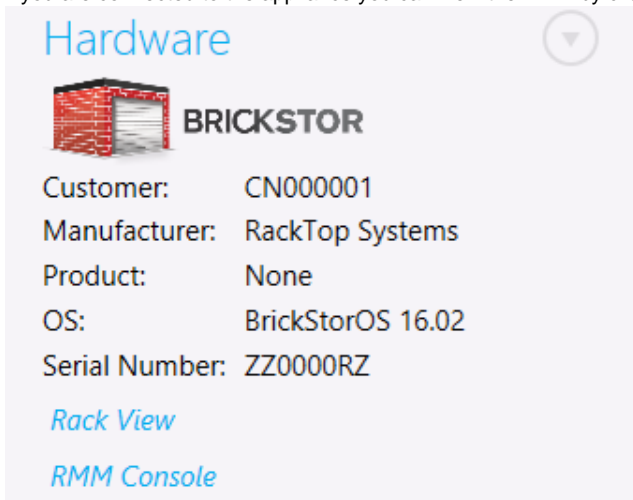

From the Command Line (CLI)

```
# bsradm hw rmm
IpSource: DHCP Address
IpAddress: 10.1.12.129
SubnetMask: 255.255.255.0
MacAddress: 00:1e:67:a0:57:db
SnmpCommunityString: public
DefaultGateway: 10.1.12.254
Vlan: 0
```

In this case the IP of the RMM is 10.1.12.129

From the BIOS

1. See this article: <https://kb.racktopsystems.com/x/qgAX>

Related articles

Page:BrickStor Guides

Page:How To Configure A New BrickStor Network Interface

Page:How To Set the RMM IP from BrickStor OS CLI

Page:How To Set the RMM IP

Page:How To Retrieve the RMM IP